
DIAPHRAGM TYPE LEVEL SWITCH Model KF-500

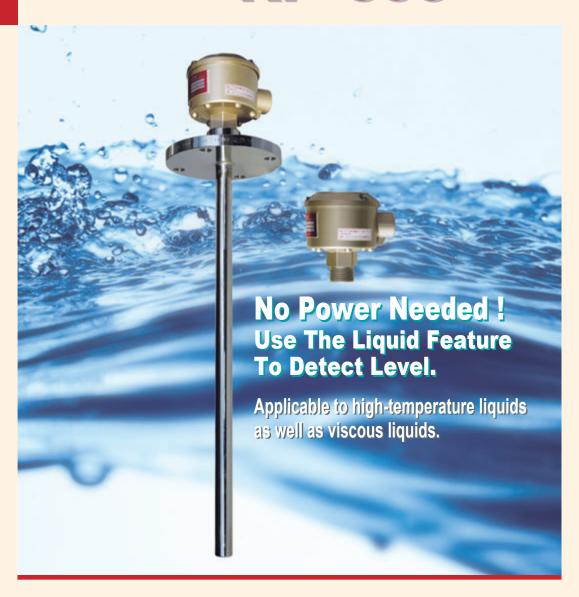

A simple design of the moving part now comes up with the reliable operation.

The detection level is arbitrarily adjustable depending upon the length of the detection pipe.

■ Principle of Operation

The Diaphragm Type Level Switch is a level switch detecting an object to be measured, through utilizing the pressure change affected by water rise and fall in a pipe.

As water level rises, air pressure inside a pipe gets higher. When the measuring face of diaphragm falls under the air pressure, the diaphragm presses a micro switch, thus turning it on.


In turn, as the water level descends and the air pressure inside the detection pipe gets lower, the output contact will return to the initial condition.



Precautions for Use

- In view of working pressure being minute, completely seal the housing body and the detection pipe with seal adhesives in liquid form.
- Exercise your discretion to select a detection pipe by material, bore diameter and length according to the nature of liquid.
- It is also possible to change the detection water-level by fixing a sliding flange.
- Make the tank opened when using.
- Detection pipe and Flange can optionally be available.

Application

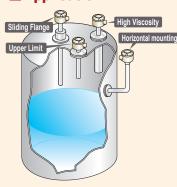

Standard Specifications


Spec. Model	KF-500	KF-500H	
Contact Capacity	250VAC 5A	250VAC 5A	
	250VDC 0.25A	250VDC 0.3A	
	30VDC 5A	30VDC 5A	
Temperature	−20 to +70°C	−25 to +150°C	
Pressure	atm.	atm.	
Enclosure Rating	Equivalent to IP54	Equivalent to IP54	
Operating Water Level *1	40±10mm	50 ±10mm	
Breaking Water Level *1	30±10mm	40 ±10mm	
Weight	0.6kg	0.6kg	
Conduit Connection	G 3/4	G 3/4	
Housing Material	ADC	ADC	
Diaphragm	Sillicon Rubber	Sillicon Rubber	


- Flange 25A is the smallest. ANSI and DIN can be available.
- •The closed tank is unusable.
- This can be an explosion-proof product when an intrinsically safe explosion-proof barrier is used. *2

Note:

- *1) The motion level signifies a level from the pipe tip to the surface, witnessed when screwing a 1/2B SGP pipe in 500mm into the thread part of body has a switch turn on.
- *2) You may replace by a micro switch which can be operational under a minute current, depending upon the barrier relay type. Confirm the electric rating of the barrier relay now in use and contact our Sales representative.
- *3) In installing at the place over 150°C, we recommend KF-500H(S) which is heatproof up to 250°C, but consult with our sales staff because its shape is different.

General Drawings / Internal Structure / Contact Construction • Figures of General Drawing • Figures of Internal Structure

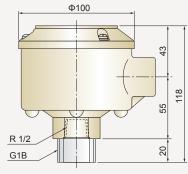

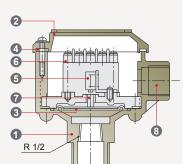

Figures of Contact Construction CO

No.	Parts Name	Material
1	Housing	ADC
2	Lid	ADC
3	Diaphragm	Sillicon Rubber
4	Gasket	NBR
5	Micro Switch	
6	Terminal Block	
7	Push Rod	C3604
8	Conduit Connection	G 3/4

UK SGS

Line of business

- Rotary Paddle Type Level Switch
- Vibration Type Level Switch
- · Swing Type Level Switch
- · Acoustic Level Switch
- Capacitance Type Level Switch
- Capacitive Proximity Sensor
- Capacitance Type Level Indicator
- · Diaphragm Type Level Switch
- · Tilt Switch
- · Leak Type Level Switch

- · Microwave Type Switch
- Sounding Bob Type Level Indicator Ultrasonic Flow meter · Flow Switch

- Conductance Type Level Switch
- · Float Type Level Indicator
- Ultrasonic Type Level Indicator
- Equipments For Conveyor Lines
- Dust Monitor System
- · Zirconia Oxvgen Analyzer
- · Laser Type Level Indicator
- RADAR Type Level Indicator
- · On-line Sensors for Accurate Liquid Analysis

*Please be sure to read USER'S GUIDE, Installation & Operation Instructions before using the instrument.

*The specifications herein may be subject to change without advance notice.

Nuclear Power Generation to Rice Milling
All-round Manufacturer of Level Controllers for Powder, Granules and Liquid

KANSAI Automation Co., Ltd.

Headquarters:

2-14, Togano-cho, Kita-ku, Osaka 530-0056, Japan TEL. 81-6-6312-2071 FAX. 81-6-6314-0848 e-mail: infoe@kansai-automation.co.jp

http://www.kansai-automation.co.jp

Tokyo Branch: 1-29-6, Hamamatsu-cho, Minato-ku. Tokyo 105-0013, Japan TEL. 81-3-5777-6931 FAX. 81-3-5777-6933

Nagoya Office: 3-31-27, Uchiyama, Chigusa-ku, Nagoya 464-0075, Japan TEL. 81-52-741-2432 FAX. 81-52-741-1588

Kyushu Office: 1-2-39, Asano, Kokura Kita-ku, Kitakyushu 802-0001, Japan TEL. 81-93-511-4741 FAX. 81-93-511-4580

